
# Hardware Maintenance Manual

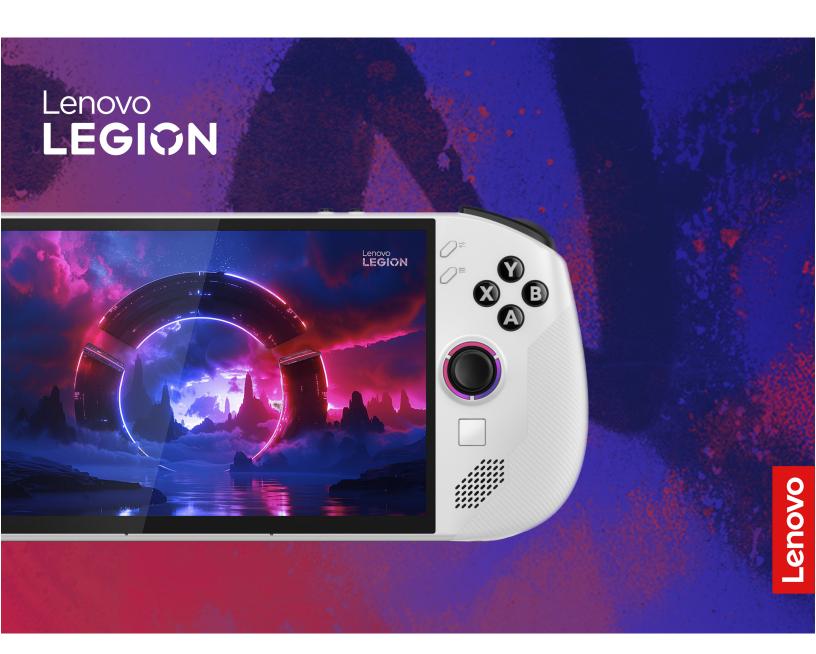

Lenovo Legion Go S (8", 1)

First Edition (November 2024)

© Copyright Lenovo 2024.

# **Contents**

About this manual iii	Remove the deco cover
	Remove the bumper buttons
Chapter 1. Safety information 1	Remove the B cover
General safety	Remove the battery pack
Electrical safety	Remove the fan
Safety inspection guide	Remove the heat sink
Handling devices that are sensitive to electrostatic discharge	Remove the SSD bracket, SSD, and SSD pad 34
Grounding requirements	Remove the trigger button frames
Safety notices (multilingual translations)	Remove the motors
Safety Hotices (Huttillingual translations) 4	Remove the boards and D-pad rubber
Chapter 2. General checkout 19	Remove the D-pad
What to do first	Remove the ABXY rubber and ABXY buttons 40
CRU list	Remove the function buttons
	Remove the touchpad module
Chapter 3. Identifying FRUs	Remove the RGB lights
(CRUs) 21	Remove the volume button bezel
Locate FRUs and CRUs	Remove the speakers
	Remove the power button 46
Chapter 4. Removing a FRU or	Remove the EDP cable 47
CRU 25	Remove the WiFi mylar and antennas 48
Service tools	Remove the system board, left UB_MB FFC, and
General guidelines	right UB_MB FFC 50
Handling thermal interface materials 26	Use a Golden Key U1 tool to flash-write key id
Type, quantity, and areas of thermal interface	information
materials application on the heat sink 26	Remove the LCD module
Areas on the system board where thermal interface materials are applied 27	Appendix A. Label locations 53
Disable the built-in battery	Trademarks
Remove the joystick caps	

# **About this manual**

This manual contains service and reference information for the following Lenovo products.

Table 1. Product model name and machine type

Model name	Machine type (MT)
<ul><li>Legion Go S 8ARP1</li><li>Legion Go S 8ARP1 1</li></ul>	83L3
<ul><li>Legion Go S 8APU1</li><li>Legion Go S 8APU1 1</li></ul>	83N6

#### Important:

- It is recommended that these products be repaired by trained service technicians. For customers electing to repair their own Lenovo products, please follow all instructions carefully.
- Before servicing a Lenovo product, be sure to read all the information under Chapter 1 "Safety information" on page 1.

# **Chapter 1. Safety information**

This chapter presents the following safety information that you need to be familiar with before you service a Lenovo notebook computer.

### **General safety**

Follow these rules to ensure general safety:

- Observe good housekeeping in the area of the machines during and after maintenance.
- When lifting any heavy object:
  - 1. Make sure that you can stand safely without slipping.
  - 2. Distribute the weight of the object equally between your feet.
  - 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift.
  - 4. Lift by standing or by pushing up with your leg muscles; this action removes the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the equipment unsafe.
- Before you start the machine, make sure that other people are not in a hazardous position.
- Place removed covers and other parts in a safe place, away from all personnel, while you are servicing the
  machine.
- Keep your tool case away from walk areas so that other people will not trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of a machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with a non-conductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

**Attention:** Metal objects are good electrical conductors.

- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that might be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

# **Electrical safety**

Observe the following rules when working on electrical equipment.

**Important:** Use only approved tools and test equipment. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents. Many customers have, near their equipment, rubber floor mats that contain small conductive fibers to decrease electrostatic discharges. Do not use this type of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch, or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near equipment that has hazardous voltages.
- Disconnect all power before:
  - Performing a mechanical inspection
  - Working near power supplies
  - Removing or installing main units

- · Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
  - Ensure that another person, familiar with the power-off controls, is near you.

**Attention:** Another person must be there to switch off the power, if necessary.

- Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

Attention: An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.

- When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
- Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; Instructions for these precautions are in the safety sections of maintenance information. Use extreme care when measuring high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check that it has been powered off.
- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, non-grounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
  - Power supply units
  - Pumps
  - Blowers and fans
  - Motor generators
  - Similar units as listed above

This practice ensures correct grounding of the units.

- If an electrical accident occurs:
  - Use caution; do not become a victim yourself.
  - Switch off power.
  - Send another person to get medical aid.

# Safety inspection guide

The purpose of this inspection guide is to assist you in identifying potentially unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service technicians from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards due to attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- · Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged cathode ray tube (CRT) face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potentially unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

#### Checklist:

- 1. Check exterior covers for damage (loose, broken, or sharp edges).
- 2. Power off the computer. Disconnect the power cord.
- 3. Check the power cord for:
  - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
  - b. The power cord should be the authorized type specified for your computer. Go to: http:// www.lenovo.com/serviceparts-lookup
  - c. Insulation must not be frayed or worn.
- 4. Check for cracked or bulging batteries.
- Remove the cover.
- 6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
- 7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
- 8. Check for worn, frayed, or pinched cables.
- 9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

### Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

#### Notes:

- 1. Use product-specific ESD procedures when they exceed the requirements noted here.
- 2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

#### When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

**Note:** The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

## **Grounding requirements**

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

### Safety notices (multilingual translations)

The safety notices in this section are provided in the following languages:

- English
- Arabic
- Brazilian Portuguese
- French
- German
- Hebrew
- Japanese
- Korean
- Spanish
- Traditional Chinese



#### **DANGER**

Before the computer is powered on after FRU replacement, make sure that all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.



#### **DANGER**

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.



#### **DANGER**

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.



#### **DANGER**

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100°C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.



#### **DANGER**

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water for at least 15 minutes. Seek medical care if any symptoms from the fluid are present after washing.



#### **DANGER**

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.



#### **DANGER**

Though the main batteries have low voltage, a short-circuited or grounded battery can produce enough current to burn personnel or combustible materials.



#### **DANGER**

Unless hot swap is allowed for the FRU being replaced, do as follows before removing it: power off the computer, unplug all power cords from electrical outlets, remove the battery pack, and disconnect any interconnecting cables.



قبل اعادة تشغيل الحاسب بعد الانتهاء من استبدال FRU، تأكد من أنه قد تم اعادة كل من المسامير و السوست وكل الأجزاء الصغيرة الأخرى في أماكنهم ولم يتم فقدهم داخل الحاسب. ويمكن التحقق من ذلك عن طريق هز الحاسب والاستماع لأي صوت صاخب يصدر منه. قد تؤدى الأجزاء أو الرقائق المعدنية الى حدوث دائرة قصر.



تحتوي بعض البطاريات الاحتياطية على كمية صغيرة من مادتي النيكل والكادميوم. لا تقم بقك أو اعادة شحن البطارية الاحتياطية ولا تقم أيضا بالقاءها في النار أو الماء ولا تتسبب في احداث دائرة قصر بها. قم بالتخلص من البطارية كما هو موضح في القوانين المحلية. استخدم نوع البطارية المحدد والذي يوصى باستخدامه. حيث أنه قد يودي استخدام نوع بطارية غير صحيح الى اشتعالها أو انفجارها.



تحتوي حزمة البطارية على كمية صغيرة من مادة النيكل. لا تقم بفكها أو القاءها في النار أو الماء ولا تتسبب في احداث دائرة قصر بها. تخلص من حزمة البطارية وفقا لما هو موضح في القوانين المحلية. قم، عند استبدال حزمة البطارية، باستخدام الأنواع المحددة فقط والتي يوصى باستخدامها. حيث أنه قد يودي استخدام نوع بطارية غير صحيح الى اشتعالها أو انفجارها.



قد تتسبب بطارية الليثيوم في حدوث حريق أو انفجار أو حدوث حروق شديدة. لا تقم باعادة شحن البطارية أو ازالة موصل الاستقطاب الخاص بها ولا تحاول أيضا فكها أو تسخينها لأكثر من ١٠٠ درجة منوية (١٢١ فهرنهايت) أو حرقها أو تعريض محتويات الخاتة الخاصة بها للماء. قم بالتخلص من البطارية وفقا لما هو موضح في القوانين المحلية. استخدم نوع البطارية المحدد والذي يوصى باستخدامه. حيث أنه قد يؤدي استخدام نوع بطارية غير صحيح الى اشتعالها أو انفجارها.



اذا ما انكسرت شاشة LCD ولامس السائل الداخلي عينيك أو يديك، قم في الحال بغسلهما بالماء لمدة لا تقل عن ١٥ دقيقة. اذا ما وجدت أي أعراض بعد الغسل اطلب عندنذ المساعدة الطبية.



نتجنب التعرض لأي صدمات، لا تقم بازالة الغطاء البلاستيكي الذي يحمي الجزء الأسفل من بطاقة العاكس.



على الرغم من أن البطاريات الرئيسية يكون لها جهد منخفض، الا أنه قد تقوم البطاريات التي حدث قصور بها أو التي تم توصيلها أرضيا باصدار تيار يكفي لحدوث حروق للأفراد أو تعرض المواد القابلة للاشتعال للحريق.



ما لم يتم السماح بالتبديل الفوري لأي FRU الجاري استبداله بدون ضرورة اغلاق النظام، قم بتنفيذ ما يلي قبل ازالته. قم بايقاف تشغيل الحاسب ونزع كل أسلاك الطاقة من المخارج الكهربائية وقم أيضا بازالة حزمة البطارية ثم قم بفصل أي كابلات متصلة.



#### **PERIGO**

Antes de ligar o computador após a substituição da FRU, certifique-se de que todos os parafusos, molas e outras peças pequenas estejam no lugar e não estejam soltos dentro do computador. Verifique isso sacudindo o computador e procurando ouvir sons de peças soltas. Peças metálicas ou lascas de metal podem causar curto-circuito.



#### **PERIGO**

Algumas baterias reserva contêm uma pequena quantidade de níquel e cádmio. Não desmonte uma bateria reserva, recarregue-a, jogue-a no fogo ou na água, ou deixe-a entrar em curto-circuito. Descarte a bateria conforme requerido pelas leis ou regulamentos locais. Use somente a bateria nas partes listadas apropriadas. O uso de uma bateria incorreta pode resultar em combustão ou explosão da bateria.



#### **PERIGO**

O pacote da bateria contém uma pequena quantidade de níquel. Não o desmonte, jogue-o no fogo ou na água, ou deixe-o entrar em curto-circuito. Descarte o pacote da bateria conforme requerido pelas leis ou regulamentos locais. Use somente a bateria nas partes listadas apropriadas ao substituir o pacote da bateria. O uso de uma bateria incorreta pode resultar em combustão ou explosão da bateria.



#### **PERIGO**

A bateria de lítio pode causar incêndio, explosão ou graves queimaduras. Não a recarregue, remova seu conector polarizado, desmonte-a, aqueça-a acima de 100°C (212°F), incinere-a, ou exponha o conteúdo de sua célula à água. Descarte a bateria conforme requerido pelas leis ou regulamentos locais. Use somente a bateria nas partes listadas apropriadas. O uso de uma bateria incorreta pode resultar em combustão ou explosão da bateria.



#### **PERIGO**

Se o LCD quebrar e o fluido de dentro dele entrar em contato com seus olhos ou com suas mãos, lave as áreas afetadas imediatamente com água durante pelo menos 15 minutos. Procure cuidados médicos se algum sintoma causado pelo fluido surgir após a lavagem.



#### **PERIGO**

Para evitar choque elétrico, não remova a capa plástica que protege a parte inferior da placa inversora.



#### **PERIGO**

Embora as principais baterias possuam baixa voltagem, uma bateria em curto-circuito ou aterrada pode produzir corrente o bastante para queimar materiais de pessoal ou inflamáveis.



#### **PERIGO**

A menos que uma hot swap seja permitida para a FRU que está sendo substituída, faça o seguinte antes de removê-la: desligue o computador, desconecte todos os cabos de energia das tomadas, remova o pacote de baterias e desconecte quaisquer cabos de interconexão.



#### **DANGER**

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.



#### **DANGER**

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'exploser.



#### **DANGER**

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.



#### **DANGER**

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une temperature supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.



#### **DANGER**

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.



#### **DANGER**

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.



#### **DANGER**

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.



#### **DANGER**

Si le remplacement à chaud n'est pas autorisé pour l'unité remplaçable sur site que vous remplacez, procédez comme suit avant de retirer l'unité : mettez l'ordinateur hors tension, débranchez tous les cordons d'alimentation des prises de courant, retirez le bloc de batterie et déconnectez tous les câbles d'interconnexion.



#### **VORSICHT**

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder-splitter können Kurzschlüsse erzeugen.



#### VORSICHT

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nur durch die Verkaufsstelle oder den IBM Kundendienst ausgetauscht werden. Sie darf nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Die Batterie kann schwere Verbrennungen oder Verätzungen verursachen. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Bereitschafts-oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.



#### **VORSICHT**

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.



#### **VORSICHT**

Die Systembatterie ist eine Lithiumbatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100°C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.



#### **VORSICHT**

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.



#### **VORSICHT**

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.



#### VORSICHT

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.



#### VORSICHT

Wenn ein Austausch der FRU bei laufendem Betrieb nicht erlaubt ist, gehen Sie beim Austausch der FRU wie folgt vor: Schalten Sie den Computer aus, ziehen Sie alle Netzkabel von den Netzsteckdosen ab, entfernen Sie den Akku und ziehen Sie alle miteinander verbundenen Kabel ab.



סכנה

לפני חפעלת חמחשב לאחר חחלפת FRU יש לוודא שכל חברגים, חקפיצים, וחלקים קטנים אחרים נמצאים במקומם ואינם חופשיים לזון בתוך חמחשב. כדי לוודא זאת, יש לטלטל את חמחשב ולחקשיב לגילוי קולות שקשוק. חלקי או שבבי מתכת עלולים לגרום לקצרים חשמליים.



סכנה

סוללות המתנה מסוימות מכילות כמות קטנה של ניקל וקדמיום. אין לפרק סוללת המתנה, לטעון אותה מחדש, להשליך אותה לאש או למים או לקצר אותה. יש לסלק את הסוללה כנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.



סכנה

מארז הסוללה מכיל כמות קטנה של ניקל וקדמיום. אין לפרק את מארז הסוללה, להשליך אותו לאש או למים או לקצר אותו. יש לסלק את מארז הסוללה הסוללה כנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה בזמן החלפת מארז הסוללה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.



סכנה

סוללת הליתיום עלולה לגרום לשריפה, להתפוצצות או לכוויות קשות. אין לטעון אותה מחדש, לסלק את המחבר המקוטב שלה, לפרק אותה או לחמם אותה לטמפרטורה העולה על 100 מעלות צלויום. אין לשרוף את הסוללה ואין לחשוף את תוכן התא למים. יש לסלק את הסוללה כנדרש בתקנות ובחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימים. שימוש בסוללה אחרת עלול לגרום לסכנת שריפה או התפוצצות.



סכנה

אם מסך הגביש הנוזלי (LCD) נשבר וחנוזל מתוך המסך בא במגע עם עיניכם או ידיכם, שטפו את האזורים הנגועים מיד במים במשך 15 דקות לפחות. פנו לקבלת עזרה רפואית אם תסמינים הנובעים מהמגע עם הנוזל נמשכים לאחר השטיפה.



סכנה

כדי למנוע התחשמלות, אין לחסיר את מכסה הפלסטיק המגן על חלקו התחתון של הכרטיס החפוך.



סכנה

אף שהסוללות הראשיות הן בעלות מתח נמוך, סוללה מקוצרת או מוארקת עלולה להפיק זרם מספיק לגרימת כוויות או להצתת חומרים דליקים.



סכנה

אלא אם כן מותרת יהחלפה חמחי של ה-FRU חמוחלף, פעלו כדילחלן לפני הסרתו : כבו את המחשב, נתקו את כל כבלי החשמל מהשקעים, הוציאו את מארז הסוללות ונתקו את כל הכבלים המחוררים מחחררים המחוררים המחררים המחוררים המחוררי



危険

FRU の交換後、 ThinkPad の電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、また ThinkPad の内部で緩んでいないことを確認してください。 これを確認するには、 ThinkPad を振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。



危険

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。



危険

バッテリー・パックには少量のニッケルが含まれています。バッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。バッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。バッテリー・パックを交換するときは、適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。



**危険** 

リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バックアップ・バッテリーの充電、その極性コネクターの取り外し、バッテリー本体の分解、100℃(212°F)以上への加熱、焼却、電池の中身を水に浸すことはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。



危険

LCD が破損し、 LCD の中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。



危険

感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カバーを外さないでください。



危險

メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。



合除

交換しようとしている FRU がホット・スワップに対応していない場合、それを取り外す前に、コンピューターの電源をオフにし、すべての電源コードをコンセントから抜き、バッテリー・パックを取り外して、相互接続しているケーブルをすべて切り離してください。



위호

FRU를 교체하고 나서 컴퓨터 전원을 켜기 전에 모든 나사, 스프링 및 기타 작은 부품들이 올바른 위치에 있는지, 컴퓨터 내부에 단단하게 연결되어 있 는지 확인하십시오. 컴퓨터를 흔들어 달깍거리는 소리가 나지 않는지 확인하 십시오. 금속 부품 또는 금속 조각은 누전을 일으킬 수 있습니다.



위헌

일부 보조 배터리에는 소량의 니켈 및 카트뮴이 포함되어 있습니다. 보조 배터리를 분해하거나, 다시 충전하거나, 불 또는 물에 던지거나, 단락시키지 마십시오. 배터리 팩을 폐기할 때에는 해당 지역의 법률 규정을 따르십시오. 배터리 팩을 교체할 때에는 올바른 배터리만 사용하십시오. 올바르지 않은 배터리를 사용하면 배터리가 발화되거나 폭발할 수 있습니다.



위험

배터리 팩에는 소량의 니켈이 포함되어 있습니다. 배터리 팩을 분해하거나, 불 또는 물에 던지거나, 단락시키지 마십시오. 배터리 팩을 폐기할 때에는 해 당 지역의 법률 규정을 따르십시오. 배터리 팩을 교체할 때에는 올바른 배터 리만 사용하십시오. 올바르지 않은 배터리를 사용하면 배터리가 발화되거나 폭발할 수 있습니다.



위험

리튬 배터리는 화재, 폭발 또는 심각한 화상을 일으킬 수 있습니다. 리튬 배터리를 다시 충전하거나, 극성 커넥터를 제거하거나, 분해하거나, 100C(212F)이상으로 가열하거나, 소각하거나, 전지 내용물을 물에 노출시키지 마십시오. 배터리를 폐기할 때에는 해당 지역을 법률 규정을 따르십시오. 올바른 배터리만 사용하십시오. 올바르지 않은 배터리를 사용하면 배터리가 발화되거나 폭발할 수 있습니다.



위험

LCD가 파손되어 LCD 내부의 액체가 눈에 들어가거나 손에 묻으면 즉시 깨끗한 물로 15분 이상 닦아 내십시오. 씻은 후에 조금이라도 이상을 느끼면 즉시 병원에 가서 의사의 진찰을 받아야 합니다.



위현

전기적 위험을 방지하려면 인버터 카드의 아래 부분을 보호하는 플라스틱 덮개를 제거하지 마십시오.



위험

기본 배터리의 전압은 낮지만, 단락되거나 접지된 배터리는 화상을 입히기에 충분한 전류와 가연성 물질을 발생시킬 수 있습니다.



위형

FRU 교체 시 Hot Swap이 지원되지 않는 경우, FRU를 제거하기 전에 컴퓨터의 전원을 끄고, 전기 콘센트에서 전원 코드를 분리하고, 배터리를 제거한 후, 연결된 모든 케이블을 분리하십시오.



**PELIGRO** 

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.



**PELIGRO** 

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.



#### **PELIGRO**

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.



#### **PELIGRO**

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.



#### **PELIGRO**

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención medica si se presenta algún síntoma del fluido despues de lavarse.



#### **PELIGRO**

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.



#### **PELIGRO**

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.



#### **PELIGRO**

Salvo que se permita el intercambio en caliente para la unidad sustituible localmente, realice lo siguiente antes de extraerla: apague el sistema, desconecte todos los cables de alimentación de las tomas de alimentación eléctrica, extraiga la batería y desconecte los cables de interconexión.



#### 危險

完成 FRU 更換之後,在開啟電腦的電源之前,請確定所有螺絲、彈簧及其他小零件都已歸位,沒有遺留在電腦內部。 若要確認這一點,請搖晃電腦,聽聽看是否有卡嗒的聲響。 金屬零件或儀錶的火花會造成電線短路。



#### 危險

部分備用電池含有微量的鎳和鎘。請勿拆開備用電池、再充電、丟入火或水中, 或使其形成短路。請按照當地法令或規定來棄置電池。

僅限使用零件清單中的電池。使用不適當的電池會導致電池起火或爆炸。



#### 危險

電池套件含有微量的鎳。請勿拆開電池套件、丟入火或水中,或使其形成短路。 請按照當地法令或規定來棄置電池套件。

更換電池套件時,僅限使用零件清單中的電池。使用不適當的電池會導致電池起火或爆炸。



#### 危險

鋰電池會導致起火、爆炸或嚴重燒傷。請勿再充電、拔除其電極接頭、拆開、加熱超過 100°C (212°F)、焚燒,或讓電池組成物浸到水。請按照當地法令或規定來棄置電池。

僅限使用零件清單中的電池。使用不適當的電池會導致電池起火或爆炸。



#### 危險

如果 LCD 破裂導致 LCD 流出的液體沾到您的眼睛或手,請立即以清水沖洗沾染部位至少 15 分鐘。如果在清洗後出現該液體所造成的任何症狀,請就醫治療。



危險

為避免電擊,請勿拆下轉換卡下面的塑膠護蓋。



**危險** 

雖然主電池的電壓很低,但短路或接地電池所產生的電流,仍足以使人燒傷或 使可燃物質起火。



危險

除非 FRU 允許以熱抽換來替換,否則請依下列方式將其移除:將電腦關機,拔除插座上所有電源線,移除電池包,並拔開任何交互連接的線材。

# Chapter 2. General checkout

This chapter contains the following topics:

Before you go to the checkout instructions, ensure that you read the following important notes.

#### Important notes:

- It is recommended that only certified trained personnel perform service on the computer. For customers electing to repair their own machines, please follow all instructions carefully.
- Before replacing any FRU, read the entire page on removing and replacing FRUs.
- Be extremely careful during such write operations as copying, saving, or formatting. Drives in the computer that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- Replace a FRU only with another FRU of the correct model. When you replace a FRU, make sure that the model of the machine and the FRU part number are correct by referring to the FRU parts list.
- A FRU should not be replaced because of a single, unreproducible failure. Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing an FRU only when a problem recurs. If you suspect that a FRU is defective, clear the error log and run the test again. If the error does not recur, do not replace the FRU.
- · Be careful not to replace a nondefective FRU.

#### What to do first

When you return a FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

- 1. Name and phone number of service technician
- 2. Date of service
- 3. Date on which the machine failed
- 4. Date of purchase
- 5. Failure symptoms, error codes appearing on the display, and beep symptoms
- 6. Procedure index and page number in which the failing FRU was detected
- 7. Failing FRU name and part number
- 8. Machine type, model number, and serial number
- 9. Customer's name and address

**Note:** During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer. Following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

#### The following are not covered under warranty:

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts

- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a personal-computer card (PC card) or the installation of an incompatible card
- Improper disc insertion or use of an external optical drive
- Fuses blown by attachment of a non-supported device
- Forgotten computer password (making the computer unusable)
- Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect ac power adapter on laptop products

#### The following symptoms might indicate damage caused by non-warranted activities:

- Missing parts might be a symptom of improper service or modification.
- Check for obvious damage to a hard disk drive. If the spindle of a hard disk drive becomes noisy, the hard disk drive might have been dropped or subject to excessive force.

#### **CRU list**

Table 2. Model: Legion Go S 8ARP1 and Legion Go S 8ARP1 1 (Machine type: 83L3); Legion Go S 8APU1 and Legion Go S 8APU1 1 (Machine type: 83N6)

CRU	Туре
ac power adapter *	self-service
Power cord *	self-service
Joystick caps	self-service

Note: Parts labeled with an asterisk ("\*") are available on selected product models.

# **Chapter 3. Identifying FRUs (CRUs)**

# **Locate FRUs and CRUs**

The exploded illustrations help Lenovo service technicians identify FRUs or CRUs that they may need to replace when servicing a customer's computer.

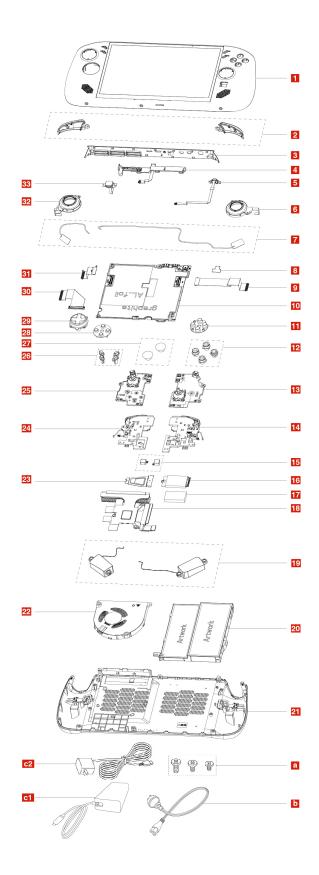


Figure 1. Exploded view

Table 3. FRU (CRU) categories

LCD module	No.	FRU (CRU) category
Bumper buttons  Deco cover  Substance of the state of the		
Deco cover  Volume button bezel  Repower button  Right RGB light  Antennas  Kirr mylar  Right UB_MB FFC  Right UB_MB FFC  Right UB_MB FFC  Right board  Right trigger button frame  Right trigger button frame  Repower search  Repower search  Speakers  Repower  Repow		
C1         Volume button           S1         Power button           G1         Right RGB light           G2         Antennas           G3         WiFi mylar           G3         Right UB_MB FFC           G4         System board           G5         ABXY rubber           G6         ABXY rubber           G7         ABXY buttons           G8         Right board           G6         Right trigger button frame           G7         Right trigger button frame           G8         SSD           G7         SSD pad           G8         SSD pad           G9         Battery pack           G9         Benekers           G9         Bran           G9         Brance<		
B         Power button           B         Right RGB light           Antennas         WiFi mylar           D         Right UB_MB FFC           B         System board           B         ABXY rubber           B         ABXY buttons           B         Right board           B         Right trigger button frame           B         Motors           B         SSD           B         SSD pad           B         Heat sink           B         Speakers           B         B over           B         B over           B         SSD bracket           B         SSD bracket           B         SSD bracket           B         SSD bracket           B         Left board           B         Left board           B         Joystick caps           B         D-pad rubber           B         D-pad liber           B         Left UB_MB FFC           <		
C         Right RGB light           C         Antennas           C         WiFi mylar           C         Right UB_MB FFC           C         System board           C         ABXY rubber           C         ABXY buttons           C         Right board           C         Right trigger button frame           C         SSD           C         SSD pad           C         SSD pad           C         Seakers           C         Battery pack           C         Battery pack           C         Fan           C         SSD bracket           C         Left trigger button frame           C         Left board           C         Function buttons           C         Joystick caps           C         D-pad rubber           C         Left UB_MB FFC           C         Left RGB light           E         Touchpad module		
Antennas  WiFi mylar  Right UB_MB FFC  ABXY rubber  ABXY rubber  Right board  Right trigger button frame  ABX SSD  ABX S		
B         WiFi mylar           Right UB_MB FFC           System board           ABXY rubber           ABXY buttons           Right trigger button frame           Motors           SSD           Matter sink           SSD pad           Battery pack           Battery pack           Battery back           Latt figger button frame           Battery button frame           Left board           Latt figger button frame           Latt board           D-pad rubber           D-pad rubber           Left UB_MB FFC           Left RGB light           Screw kit		
Right UB_MB FFC System board ABXY rubber ABXY buttons Right board Right board Right trigger button frame Right trigger button frame SSD Roberts Robert		
EII         ABXY rubber           EII         ABXY buttons           EII         Right board           EII         Right trigger button frame           EII         Motors           EII         SSD           EII         SSD pad           EII         Heat sink           EII         B cover           EII         B cover           EII         B cover           EII         EII           EII         SSD bracket           EII         Left trigger button frame           EII         Left board           EII         Joystick caps           EII         D-pad rubber           EII         D-pad           EII         D-pad le           EII         Left UB_MB FFC           EII         Left RGB light           EII         Touchpad module           EII         Screw kit	8	WiFi mylar
### ABXY rubber ### ABXY buttons ### Right board ### Right broard ### Right trigger button frame ### SSD ### SSD ### SSD pad ### SSD pad ### Speakers ### Be cover ### Be cover ### SSD bracket ### SSD bracket ### Left trigger button frame ### Left board ### Left board ### D-pad rubber ### D-pad #	9	Right UB_MB FFC
### ABXY buttons #### Right board ####################################	10	System board
Right trigger button frame  Motors  SSD  SSD  Heat sink  Speakers  Speakers  Sob backet  Left trigger button frame  Left trigger button frame  Left board  Left board  D-pad rubber  D-pad  EDP cable  Left UB_MB FFC  Left RGB light  Sight trigger button frame  Left RGB light  Sorew kit	11	ABXY rubber
Right trigger button frame  Motors  SSD  SSD  SSD  Heat sink  Speakers  SD  Battery pack  SSD  SSD bracket  Left trigger button frame  Left trigger button frame  Left board  Joystick caps  D-pad rubber  D-pad  EDP cable  Left UB_MB FFC  Left RGB light  Screw kit	12	ABXY buttons
Motors SSD SSD SSD pad Heat sink SSD spad Speakers Speakers SSD battery pack SSD battery pack SSD bracket SSD brac	13	Right board
III         SSD pad           III         Heat sink           III         Speakers           III         B attery pack           III         B cover           III         SSD bracket           III         Left trigger button frame           III         Left board           III         Joystick caps           III         Joystick caps           III         D-pad rubber           III         D-pad           III         D-pad           III         Left UB_MB FFC           III         Left RGB light           III         Cockwit	14	Right trigger button frame
SSD pad	15	Motors
Heat sink Speakers Battery pack B cover Fan SSD bracket Left trigger button frame Left trigger button frame Luft trigger buttons Left board Joystick caps D-pad rubber D-pad Left UB_MB FFC Left HGB light Touchpad module Screw kit	16	SSD
Speakers  Battery pack  Sover  Fan  SSD bracket  Left trigger button frame  Left board  Function buttons  Joystick caps  D-pad rubber  D-pad  EDP cable  Left UB_MB FFC  Left RGB light  Touchpad module  Screw kit	17	SSD pad
Battery pack B cover Fan SSD bracket Left trigger button frame Left board Joystick caps D-pad rubber D-pad Left UB_MB FFC Left RGB light Touchpad module Screw kit	18	Heat sink
B cover Fan SSD bracket Left trigger button frame Left board Function buttons Joystick caps D-pad rubber D-pad Left UB_MB FFC Left UB_MB FFC Left RGB light Screw kit	19	Speakers
E22         Fan           23         SSD bracket           24         Left trigger button frame           25         Left board           26         Function buttons           27         Joystick caps           28         D-pad rubber           29         D-pad           30         EDP cable           31         Left UB_MB FFC           32         Left RGB light           33         Touchpad module           33         Screw kit	20	Battery pack
SSD bracket  Left trigger button frame  Left board  Function buttons  Joystick caps  D-pad rubber  D-pad  EDP cable  Left UB_MB FFC  Left RGB light  Screw kit	21	B cover
Left trigger button frame  Left board  Function buttons  Joystick caps  D-pad rubber  D-pad  EDP cable  Left UB_MB FFC  Left RGB light  Screw kit	22	Fan
Left board  Function buttons  Joystick caps  D-pad rubber  D-pad  EDP cable  Left UB_MB FFC  Left RGB light  Touchpad module  Screw kit	23	SSD bracket
Function buttons  Joystick caps  D-pad rubber  D-pad  EDP cable  Left UB_MB FFC  Left RGB light  Touchpad module  Screw kit	24	Left trigger button frame
Joystick caps D-pad rubber D-pad D-p	25	Left board
D-pad rubber  D-pad  D-pad  D-pad  EDP cable  Left UB_MB FFC  Left RGB light  Touchpad module  Screw kit	26	Function buttons
27         D-pad           30         EDP cable           31         Left UB_MB FFC           32         Left RGB light           33         Touchpad module           3         Screw kit	27	Joystick caps
EDP cable  Left UB_MB FFC  Left RGB light  Touchpad module  Screw kit	28	D-pad rubber
Left UB_MB FFC Left RGB light Touchpad module Screw kit	29	D-pad
Left RGB light  Touchpad module  Screw kit	30	EDP cable
Touchpad module Screw kit	31	Left UB_MB FFC
Screw kit	32	Left RGB light
	33	Touchpad module
D Power cord *	a	Screw kit
	b	Power cord *

Table 3. FRU (CRU) categories (continued)

No.	FRU (CRU) category
c1	ac power adapter *
c2	ac power adapter *

# Chapter 4. Removing a FRU or CRU

### **Service tools**

The following table lists tools for servicing Lenovo computers. Tools with a cross mark are needed for serving the product models as described by this publication. Prepare them before you service the product.

Table 4. Service tools

Service tool and consumable	Model applicability
Screw driver (Phillips head) (PH1/PH0)	X
Screw driver (Torx head) (T5)	
Screw driver (Torx head) (T30)	
Pry tool 1	X
Tweezers (conductive)	Х
Tweezers (isolated)	
Suction cup	
Hexagonal socket	
Thermal interface materials	X
Acetate tape	
Polyamide tape	
Mylar tape	
Electrical tape	
Double-sided tape	
Conductive tape	
Eraser	
Heat gun	
Brown brush	

#### Notes:

- T30 screw drivers are used to service the new Intel Xeon CPUs.
- Hexagonal sockets are used to remove antenna connectors.

# **General guidelines**

When removing or replacing a FRU, ensure that you observe the following general guidelines:

- 1. It is recommended that only certified trained personnel perform service on the computer. For customers electing to repair their own machines, please follow all instructions carefully.
- Begin by removing any FRUs that have to be removed before replacing the failing FRU. Any such FRUs are listed at the beginning of each FRU replacement procedure. Remove them in the order in which they are listed.

- 3. Follow the correct sequence in the steps for removing a FRU, as shown in the illustrations by the numbers in square callouts.
- 4. When removing a FRU, move it in the direction as shown by the arrow in the illustration.
- 5. To install a new FRU in place, perform the removal procedure in reverse and follow any notes that pertain to replacement.
- 6. When replacing a FRU, carefully retain and reuse all screws.
- 7. When replacing the base cover, reapply all labels that come with the replacement base cover. If some original labels are not included with the replacement base cover, peal them off from the original base cover and paste them on the replacement base cover.



Before removing any FRU or CRU, disable the battery, unplug all power cords from electrical outlets, and wait about ten minutes to let the computer cool down.

**Attention:** After replacing a FRU, do not turn on the computer until you have ensured that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.

**Attention:** The system board is sensitive to and can be damaged by ESD. Before touching it, establish personal grounding by touching a ground point with one hand or by using an ESD strap (P/N 6405959).

### Handling thermal interface materials

Thermal interface materials are typically applied between a heat sink and a CPU (and/or GPU) die to enhance the heat transfer capability of the heat sink. If thermal interface materials are exposed during computer servicing, such as when replacing the heat sink or system board, it is important to handle the thermal interface materials properly.

- You need to completely remove the old thermal interface materials from the CPU and/or GPU die.
- You need to apply new thermal interface materials onto the heat sink according to the type, quantity, and application areas specified in this publication.

# Type, quantity, and areas of thermal interface materials application on the heat sink

The table and figure below provide information on the type and quantity of thermal interface materials, as well as the specific areas on the heat sink where these materials should be applied.

Area	Туре	Quantity	
а	7958-SP	0.141 g, 17.25 mm × 13.82 mm × 0.2 mm	



Figure 2. Areas on the heat sink where thermal interface materials should be applied

## Areas on the system board where thermal interface materials are applied

The following figure shows the areas on the system board where thermal interface materials are applied.

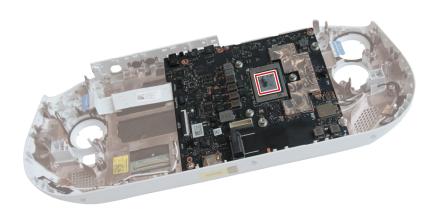


Figure 3. Areas on the system board where thermal interface materials are applied

# Disable the built-in battery

Make sure your console is powered off.

- Step 1. While holding down , press the power button until the **Novo Button Menu** is displayed.
- Step 2. Select **BIOS Setup** from the Menu.
- Step 3. Select More Settings.
- Step 4. Select Configuration → Disable Built-in battery.
- Step 5. Select **Yes** in the **Setup Confirmation** window.

The built-in battery is disabled and the computer turns off automatically.

# Remove the joystick caps

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

- Approximate time: 1-5 minutes
- Difficulty rating: Easy

#### Step 1. Remove the left joystick cap (1).

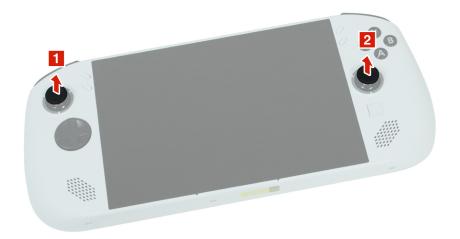


Figure 4. Remove the joystick caps

Step 2. Remove the right joystick cap (2).

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Joystick caps

### Remove the deco cover

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

- Approximate time: 5-10 minutes
- Difficulty rating: Easy

Step 1. Use a pry tool to pry the deco cover from the edge (1).



Figure 5. Remove the deco cover

#### Step 2. Remove the deco cover (2).

Go to https://support.lenovo.com/partslookup to look up the Lenovo part number of the following replacement

Deco cover

## Remove the bumper buttons

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

"Remove the deco cover" on page 28

Approximate time: 5–10 minutes

• Difficulty rating: Easy

Step 1. Remove two screws with a screw driver (1).

Note: It is recommended to use a magnetized screw driver to remove screws to avoid them falling into air vents.



Figure 6. Remove screws and remove bumper buttons

Table 5. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
1	M2	5	1.85 ± 0.15	2

Step 2. Remove the bumper buttons (2).

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

**Bumper buttons** 

### Remove the B cover

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

"Remove the deco cover" on page 28

"Remove the bumper buttons" on page 29

• Approximate time: 10-20 minutes

· Difficulty rating: Easy

Step 1. Remove three screws at the top of the console with a screw driver (1).

**Note:** It is recommended to use a magnetized screw driver to remove screws to avoid them falling into air vents.



Figure 7. Remove screws at the top

Table 6. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
1	M2	3	1.85 ± 0.15	3

Step 2. Remove three screws at the bottom of the console (2).



Figure 8. Remove screws at the bottom

Table 7. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
2	M2	3	1.85 ± 0.15	3

Step 3. Use a pry tool to pry the B cover from the edge (3).



Figure 9. Remove the B cover

Go to https://support.lenovo.com/partslookup to look up the Lenovo part number of the following replacement part:

B cover

## Remove the battery pack

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- Approximate time: 5–10 minutes
- Difficulty rating: Easy

Step 1. Disconnect the battery pack cable from the connector carefully (1).

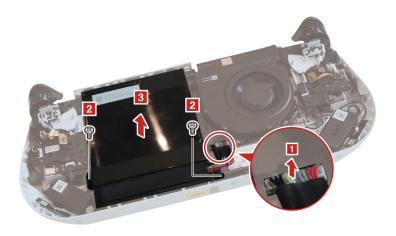


Figure 10. Disconnect the battery pack cable, remove screws, and remove the battery pack

Step 2. Remove two screws with a screw driver (2).

Table 8. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
2	M2	5	1.85 ± 0.15	2

Step 3. Remove the battery pack (3).

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Battery pack

#### Remove the fan

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- Approximate time: 5–10 minutes
- Difficulty rating: Easy

Step 1. Disconnect the fan cable from the connector carefully (1).

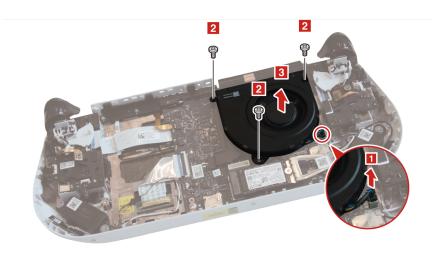


Figure 11. Disconnect the fan cable, remove screws, and remove the fan

Step 2. Remove three screws with a screw driver (2). Remove the fan (3).

Table 9. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
2	M2	5	1.85 ± 0.15	3

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Fan

#### Remove the heat sink

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- "Remove the battery pack" on page 31
- "Remove the fan" on page 32
- Approximate time: 5-10 minutes
- Difficulty rating: Easy

Step 1. Remove three screws with a screw driver (1).

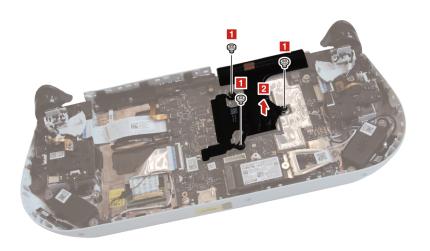


Figure 12. Remove screws and remove the heat sink

Table 10. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
1	M1.6	1.7	1.2 ± 0.1	3

Step 2. Remove the heat sink (2).

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Heat sink

## Remove the SSD bracket, SSD, and SSD pad

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

"Remove the deco cover" on page 28

"Remove the bumper buttons" on page 29

"Remove the B cover" on page 29

• Approximate time: 10-20 minutes

· Difficulty rating: Easy

Step 1. Remove two screws with a screw driver (1). Remove the SSD bracket (2).



Figure 13. Remove screws, remove the SSD bracket, and remove the SSD

Table 11. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
1	M2	2	1.85 ± 0.15	2

- Step 2. Remove the SSD from the SSD slot (3).
- Step 3. Remove the SSD pad (4).

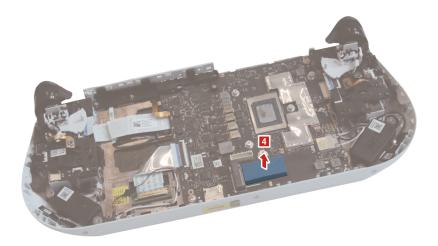


Figure 14. Remove the SSD pad

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

SSD bracket

SSD

SSD pad

## Remove the trigger button frames

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- Approximate time: 20–40 minutes
- Difficulty rating: Moderate
- Step 1. Disconnect the right SWT PCB cable from the connector (1). Lift the tab of the right back key FPC connector (2). Disconnect the right back key FPC from the connector (3). Make sure the range switch for the right trigger button has been toggled to the bottom (4).

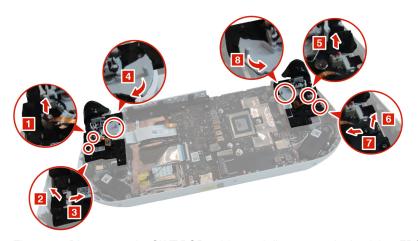


Figure 15. Disconnect the SWT PCB cables and disconnect the back key FPC

- Step 2. Disconnect the left SWT PCB cable from the connector (5). Lift the tab of the left back key FPC connector (6). Disconnect the left back key FPC from the connector (7). Make sure the range switch for the left trigger button has been toggled to the bottom (8).
- Step 3. Remove ten screws with a screw driver (9). Remove the trigger button frames (10).

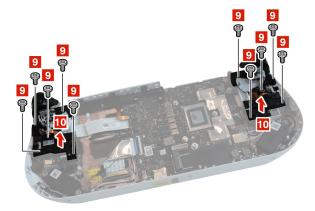


Figure 16. Remove screws and remove trigger button frames

Table 12. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
9	M2	5	1.85 ± 0.15	10

Push the back key FPC with a plastic rod from the hole on the back (11). Remove the back key FPC (12).

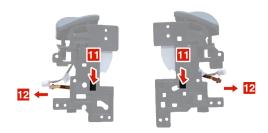


Figure 17. Remove the back key FPC

Step 5. Release the SWT PCB cables out of the cable groove (13). Remove the SWT PCB (14).

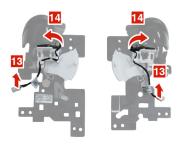


Figure 18. Remove the SWT PCB

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Left trigger button frame Right trigger button frame

#### Remove the motors

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- "Remove the trigger button frames" on page 35
- Approximate time: 5–10 minutes
- Difficulty rating: Easy

Step 1. Remove the right motor (1).

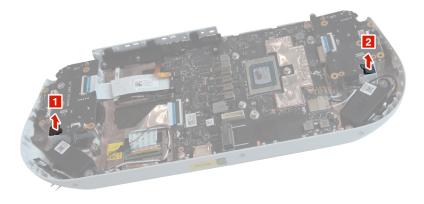


Figure 19. Remove motors

Step 2. Remove the left motor (2).

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Motors

### Remove the boards and D-pad rubber

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

"Remove the deco cover" on page 28

"Remove the bumper buttons" on page 29

"Remove the B cover" on page 29

"Remove the trigger button frames" on page 35

"Remove the motors" on page 37

• Approximate time: 20-40 minutes

· Difficulty rating: Moderate

Step 1. Lift the tab of the right UB\_Ring FPC connector (1). Disconnect the right UB\_Ring FPC from the connector (2).

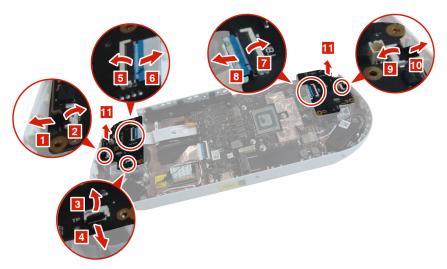


Figure 20. Disconnect the UB\_Ring FPC, disconnect the MB\_UB FFC, disconnect the touchpad board cable, and remove boards

- Step 2. Lift the tab of the touchpad board cable connector (3). Disconnect the touchpad board cable from the connector (4).
- Lift the tab of the right MB\_UB FFC connector (5). Disconnect the right MB\_UB FFC from the Step 3. connector (6).
- Lift the tab of the left MB\_UB FFC connector (7). Disconnect the left MB\_UB FFC from the Step 4. connector (8).
- Step 5. Lift the tab of the left UB\_Ring FPC connector (9). Disconnect the left UB\_Ring FPC from the connector (10).
- Step 6. Remove the left and right boards (11).
- Step 7. Remove the D-pad rubber from the left board (12).

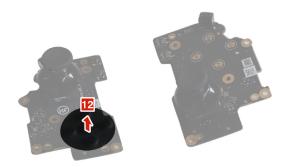


Figure 21. Remove the D-pad rubber

Go to https://support.lenovo.com/partslookup to look up the Lenovo part number of the following replacement part:

Left board

Right board

D-pad rubber

#### Remove the D-pad

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- "Remove the trigger button frames" on page 35
- "Remove the motors" on page 37
- "Remove the boards and D-pad rubber" on page 38
- Approximate time: 1-5 minutes
- Difficulty rating: Easy

Step 1. Remove the D-pad (1).

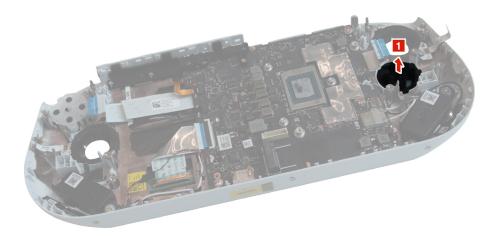


Figure 22. Remove the D-pad

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

D-pad

#### Remove the ABXY rubber and ABXY buttons

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- "Remove the trigger button frames" on page 35
- "Remove the motors" on page 37

"Remove the boards and D-pad rubber" on page 38

- Approximate time: 1-5 minutes
- Difficulty rating: Easy

Step 1. Remove the ABXY rubber (1).



Figure 23. Remove the ABXY rubber

#### Step 2. Remove the ABXY buttons (2).

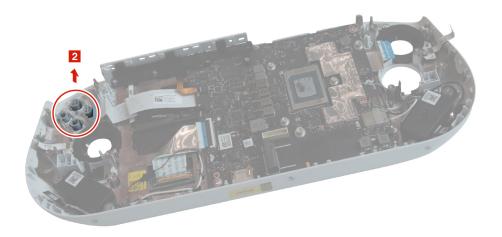


Figure 24. Remove the ABXY buttons

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

**ABXY** rubber

**ABXY** buttons

#### Remove the function buttons

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- "Remove the trigger button frames" on page 35
- "Remove the motors" on page 37
- "Remove the boards and D-pad rubber" on page 38
- Approximate time: 1-5 minutes
- Difficulty rating: Easy

Step 1. Remove the left two function buttons (1).

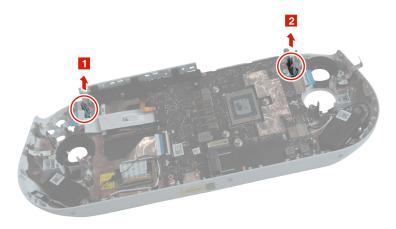


Figure 25. Remove the function buttons

Step 2. Remove the right two function buttons (2).

Go to https://support.lenovo.com/partslookup to look up the Lenovo part number of the following replacement part:

Function buttons

## Remove the touchpad module

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- "Remove the trigger button frames" on page 35

"Remove the motors" on page 37

"Remove the boards and D-pad rubber" on page 38

• Approximate time: 5–10 minutes

• Difficulty rating: Easy

Step 1. Remove one screw with a screw driver (1).



Figure 26. Remove one screw and remove the touchpad module

Table 13. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
1	M1.6	1.7	1.2 ± 0.1	1

Step 2. Remove the touchpad module (2).

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Touchpad module

## Remove the RGB lights

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

"Remove the deco cover" on page 28

"Remove the bumper buttons" on page 29

"Remove the B cover" on page 29

"Remove the battery pack" on page 31

"Remove the trigger button frames" on page 35

"Remove the motors" on page 37

"Remove the boards and D-pad rubber" on page 38

• Approximate time: 5–10 minutes

· Difficulty rating: Easy

Step 1. Remove four screws with a screw driver (1).

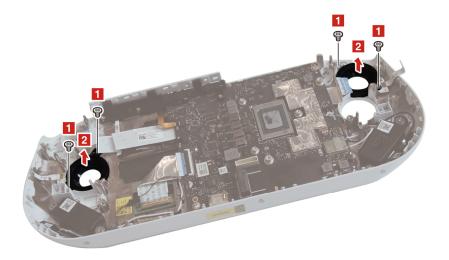


Figure 27. Remove screws and remove RGB lights

Table 14. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
1	M2	3	1.85 ± 0.15	4

Step 2. Remove the RGB lights (2).

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Left RGB light

Right RGB light

#### Remove the volume button bezel

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

"Remove the deco cover" on page 28

"Remove the bumper buttons" on page 29

"Remove the B cover" on page 29

"Remove the battery pack" on page 31

"Remove the fan" on page 32

• Approximate time: 10-20 minutes

· Difficulty rating: Easy

Step 1. Remove four screws with a screw driver (1).

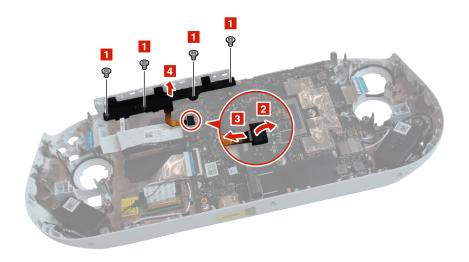


Figure 28. Remove screws, disconnect the ALS FPC, and remove the volume button bezel

Table 15. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
1	M2	3	1.85 ± 0.15	4

- Step 2. Lift the tab of the ALS FPC connector (2). Disconnect the ALS FPC from the connector (3). Remove the volume button bezel (4).
- Step 3. Slowly tear the ALS FPC from the volume button bezel (5).

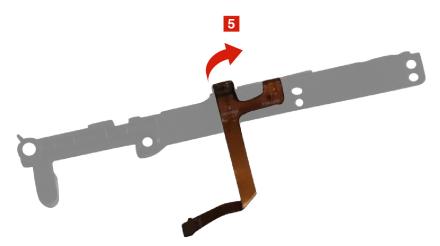


Figure 29. Tear the ALS FPC

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Volume button bezel

## Remove the speakers

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

"Remove the deco cover" on page 28

"Remove the bumper buttons" on page 29

"Remove the B cover" on page 29

"Remove the battery pack" on page 31

"Remove the fan" on page 32

• Approximate time: 10-20 minutes

• Difficulty rating: Easy

Step 1. Disconnect the speaker cables from the connectors (1).

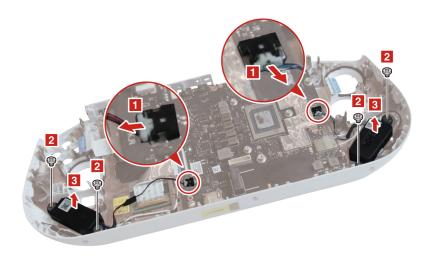


Figure 30. Disconnect speaker cables, remove screws, and remove speakers

Step 2. Remove four screws with a screw driver (2). Remove the speakers (3).

Table 16. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
2	M2	2	1.85 ± 0.15	4

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

Speakers

## Remove the power button

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

"Remove the deco cover" on page 28

"Remove the bumper buttons" on page 29

"Remove the B cover" on page 29

"Remove the battery pack" on page 31

"Remove the fan" on page 32

"Remove the volume button bezel" on page 44

Approximate time: 5–10 minutes

• Difficulty rating: Easy

Lift the tab of the power button FPC connector (1). Disconnect the power button FPC from the connector (2).

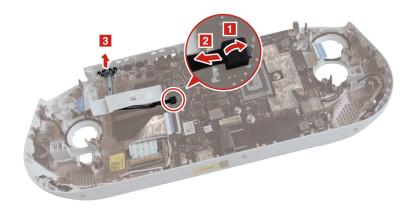


Figure 31. Disconnect the power button FPC and remove the power button

Step 2. Pull the power button frame out and remove the power button (3).

Go to https://support.lenovo.com/partslookup to look up the Lenovo part number of the following replacement

Power button

#### Remove the EDP cable

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

"Remove the deco cover" on page 28

"Remove the bumper buttons" on page 29

"Remove the B cover" on page 29

"Remove the battery pack" on page 31

• Approximate time: 5-10 minutes

Difficulty rating: Easy

Step 1. Lift the latch fastened on the connector of the EDP cable (1). Disconnect the EDP cable from the connector on the LCD module (2).

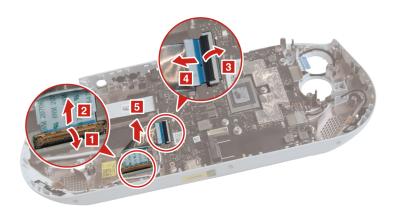


Figure 32. Disconnect the EDP cable and remove the EDP cable

Step 2. Lift the tab of the EDP cable connector (3). Disconnect the EDP cable from the connector on the system board (4). Remove the EDP cable (5).

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

EDP cable

#### Remove the WiFi mylar and antennas

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- "Remove the battery pack" on page 31
- "Remove the fan" on page 32
- "Remove the SSD bracket, SSD, and SSD pad" on page 34
- "Remove the trigger button frames" on page 35
- "Remove the motors" on page 37
- "Remove the boards and D-pad rubber" on page 38
- "Remove the volume button bezel" on page 44
- "Remove the speakers" on page 45
- "Remove the power button" on page 46
- "Remove the EDP cable" on page 47
- Approximate time: 10-20 minutes
- Difficulty rating: Easy
- Step 1. Remove three screws with a screw driver (1). Take the system board out (2).

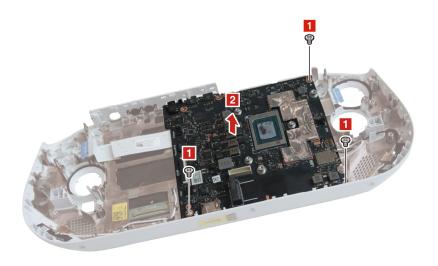


Figure 33. Remove screws and take the system board out

Table 17. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
1	M2	3	1.85 ± 0.15	3

Step 2. Slowly tear the WiFi mylar (3).

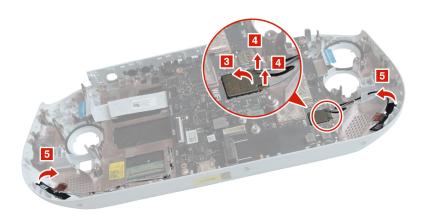


Figure 34. Tear the WiFi mylar, disconnect antenna cables, and tear antennas

Step 3. Disconnect the antenna cables from the connectors (4). Slowly tear the left and right antennas (5).

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement part:

WiFi mylar

Antennas

## Remove the system board, left UB\_MB FFC, and right UB\_MB FFC

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- "Remove the battery pack" on page 31
- "Remove the fan" on page 32
- "Remove the heat sink" on page 33
- "Remove the SSD bracket, SSD, and SSD pad" on page 34
- "Remove the trigger button frames" on page 35
- "Remove the motors" on page 37
- "Remove the boards and D-pad rubber" on page 38
- "Remove the volume button bezel" on page 44
- "Remove the speakers" on page 45
- "Remove the power button" on page 46
- "Remove the EDP cable" on page 47
- "Remove the WiFi mylar and antennas" on page 48
- Approximate time: 20–40 minutes
- Difficulty rating: Moderate

Step 1. Remove three screws with a screw driver (1). Remove the system board (2).

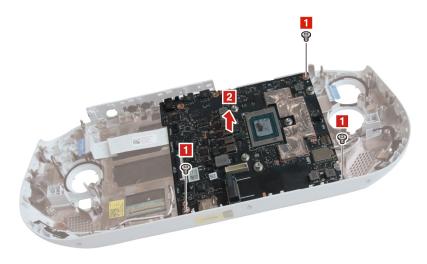


Figure 35. Remove screws and remove the system board

Table 18. Screw measurements, torque and quantity

Label	Thread	Length (mm)	Torque (kgf.cm)	Quantity
1	M2	3	1.85 ± 0.15	3

Step 2. On the removed system board, lift the tab of the left UB\_MB FFC connector (3). Disconnect the left UB\_MB FFC from the connector (4).

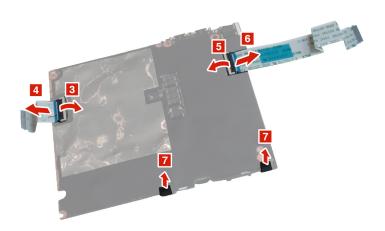


Figure 36. Disconnect the UB\_MB FFC and remove the microphone rubbers

- Lift the tab of the right UB\_MB FFC connector (5). Disconnect the right UB\_MB FFC from the Step 3. connector (6).
- Remove the microphone rubbers (7). Step 4.
- Step 5. Tear the mylar and graphite sheet (8).

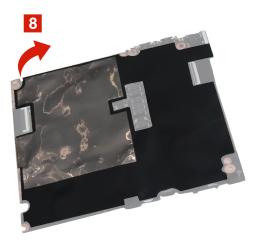


Figure 37. Tear the mylar and graphite sheet

Go to <a href="https://support.lenovo.com/partslookup">https://support.lenovo.com/partslookup</a> to look up the Lenovo part number of the following replacement

System board

Left UB\_MB FFC

Right UB\_MB FFC

#### Use a Golden Key U1 tool to flash-write key id information

After replacing the system board and re-assembling the device, use a pre-made Golden Key U1 tool to start the device and flash-write the serial number (SN), machine type (MT), product name (PN), and UUID to the new system board.

The Golden Key U1 tool is prepared by running the U1 Update software on a FAT32-formatted USB thumb drive. Go to https://support.lenovo.com/us/en/solutions/ht102004 for detailed instructions on how to create and use a Golden Key U1 tool.

#### Remove the LCD module

Make sure the battery has been disabled. Refer to "Disable the built-in battery" on page 27.

Make sure the following FRUs (or CRUs) have been removed.

- "Remove the deco cover" on page 28
- "Remove the bumper buttons" on page 29
- "Remove the B cover" on page 29
- "Remove the battery pack" on page 31
- "Remove the fan" on page 32
- "Remove the heat sink" on page 33
- "Remove the SSD bracket, SSD, and SSD pad" on page 34
- "Remove the trigger button frames" on page 35
- "Remove the motors" on page 37
- "Remove the boards and D-pad rubber" on page 38
- "Remove the D-pad" on page 40
- "Remove the ABXY rubber and ABXY buttons" on page 40
- "Remove the function buttons" on page 42
- "Remove the touchpad module" on page 42
- "Remove the RGB lights" on page 43
- "Remove the volume button bezel" on page 44
- "Remove the speakers" on page 45
- "Remove the power button" on page 46
- "Remove the EDP cable" on page 47
- "Remove the WiFi mylar and antennas" on page 48
- "Remove the system board, left UB MB FFC, and right UB MB FFC" on page 50

You can get the LCD module after removing the FRUs (or CRUs) above.

Go to https://support.lenovo.com/partslookup to look up the Lenovo part number of the following replacement part:

LCD module

## Appendix A. Label locations

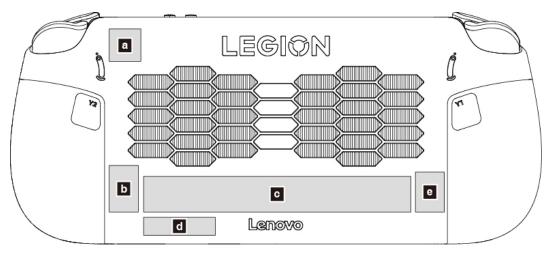


Figure 38. Label layout on the back side

Labels attached to the B cover are country/region specific. Make sure to apply the appropriate labels to the replacement B cover.

Table 19. All base cover labels

Label	Label name	Applied country/region	Label dimensions
a	CO2 offset service label		18 mm x 18 mm
b	eSupport label		17 mm x 26.1 mm
C	Print rating label		150 mm x 20 mm
d	Indonesia SDPPI label	Indonesia	40 mm x 10 mm
е	OS label		16 mm x 22.5 mm

**Note:** Depending on the country/region where the computer is purchased, the back cover may include one or more of the above listed labels.

© Copyright Lenovo 2024 53

## **Trademarks**

LENOVO and the LENOVO logo are trademarks of Lenovo.

All other trademarks are the property of their respective owners. © 2024 Lenovo.

# Lenovo